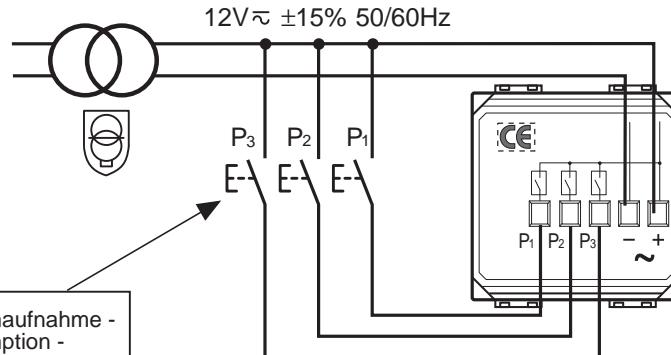
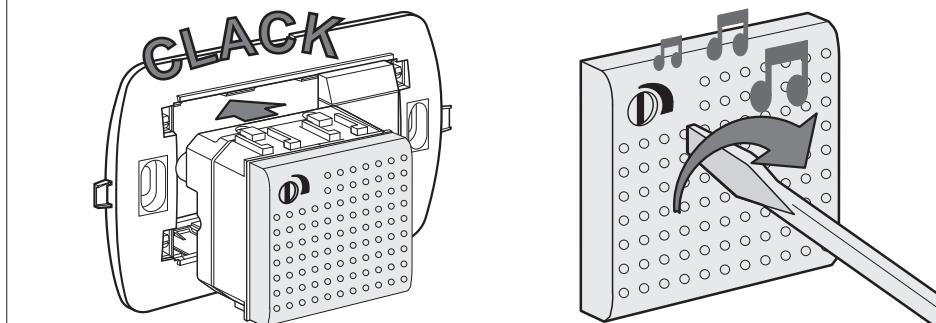


PART. B2899F

HC/HS4355/12  
L/N/NT4355/12  
A/AM5755/12Istruzioni d'uso  
Gebrauchsanweisungen  
Notice d'emploi  
Instructions for use  
Instrucciones de uso  
GebruiksaanwijzingAssorbimento - Stromaufnahme -  
Absorption - Consumption -  
Absorción - Verbruik

15 mA

150 mA

P<sub>1</sub> = Suono bitonale - Zweiklang-Emission - Son à deux tons - Two-tone sound - Sonido de doble tono - tweetonigP<sub>2</sub> = Suono tritonale - Dreiklang-Emission - Son à trois tons - Three-tone sound - Sonido de triple tono - drietonigP<sub>3</sub> = Suono di emergenza - Alarm-Emission - Son d'alarme - Alarm sound - Sonido de alarma - alarm geluid (MAX 30sec)