


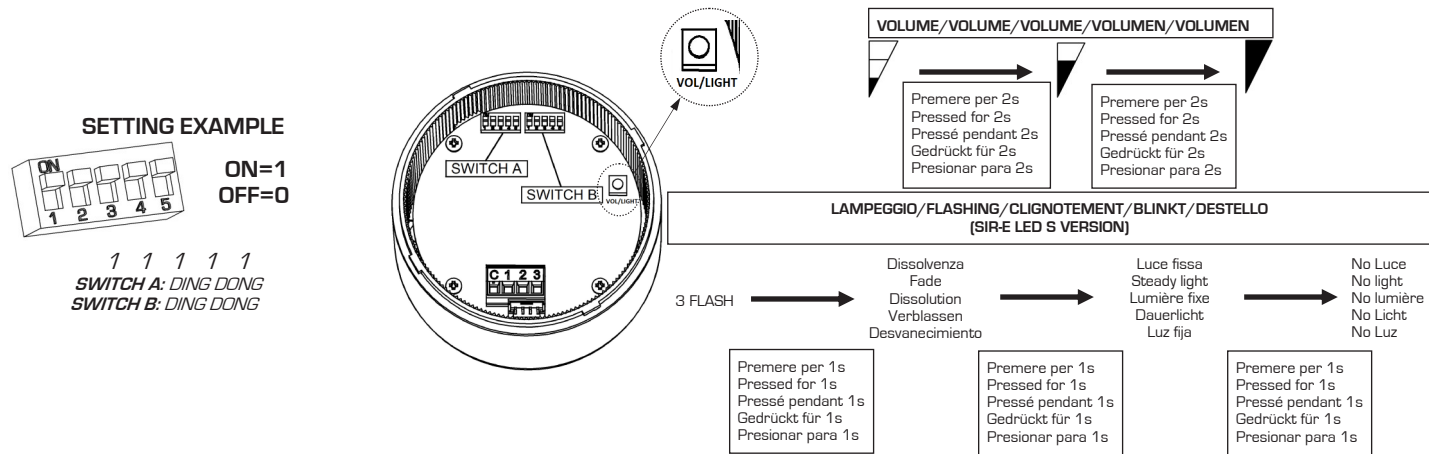

SWITCH A SOUNDS						
N°	STONE	STONE TYPE	F[Hz]	TIMES	DESCRIPTION	DIP SWITCH
1	Bitone		600 - 700	0.5s/0.5s	STANDARD	0 0 0 0 0
2	Bitone		440 - 560	0.565s/0.565s	STANDARD - EVACUATION	0 0 0 0 1
3	Bitone		800 - 970	0.25s/0.25s	BS5839-1:2002	0 0 0 0 1
4	Bitone		800 - 970	0.8s/0.8s	GENERAL PURPOSE	0 0 0 1 1
5	Bitone		1000 - 2000	1s/1s	GENERAL PURPOSE	0 0 1 0 0
6	Intermittent		420	0.625s ON/0.625s OFF	AUSTRALIA AS1670 ALERT TONE	0 0 1 0 1
7	Intermittent		660	0.15s ON/0.15s OFF	SWEDISH (AIR RAID)	0 0 1 1 0
8	Intermittent		660	1.8s ON/1.8s OFF	SWEDISH (LOCAL WARNING)	0 0 1 1 1
9	Intermittent		660	0.5s ON/0.5s OFF	SWEDISH GENERAL PURPOSE	0 1 0 0 0
10	Intermittent		720	0.7s ON/0.3s OFF	GENERAL PURPOSE	0 1 0 0 1
11	Intermittent		750	0.33s ON/0.5s OFF	GENERAL PURPOSE	0 1 0 1 0
12	Intermittent		800	0.25s ON/1s OFF	GENERAL PURPOSE	0 1 0 1 1
13	Intermittent		970 - 800	0.35s/0.35s/0.35s OFF X 3 1.5s OFF	ISO 8201	0 1 1 0 0
14	Intermittent		970	0.5s ON/0.5s OFF X 3 1.5s OFF	ISO 8201 LOW TONE	0 1 1 0 1
15	Intermittent		970	0.25s ON/0.25s OFF	GENERAL PURPOSE	0 1 1 1 0
16	Intermittent		2850	1s ON/1s OFF	GENERAL PURPOSE	0 1 1 1 1
17	Intermittent		2850	0.25s ON/0.25s OFF	GENERAL PURPOSE	1 0 0 0 0
18	Linear		300	-	GENERAL PURPOSE	1 0 0 0 1
19	Linear		660	-	SWEDISH (ALL CLEAR)	1 0 0 1 0
20	Linear		750	-	GENERAL PURPOSE	1 0 0 1 1
21	Linear		2850	-	GENERAL PURPOSE	1 0 1 0 0
22	Sweep		500 - 1200	3.5s ON/0.5s OFF	NETHERLANDS-NEN2575-2000	1 0 1 0 1
23	Sweep		500 - 1200	0.5s ON/0.5s OFF X 3 1.5s OFF	AUSTRALIA AS1670	1 0 1 1 0
24	Sweep		800 - 970	0.5s ON/0.5s OFF X 3 1.5s OFF	ISO 8201	1 0 1 1 1
25	Sweep		1000 - 1700	CYCLE 0.25s	STANDARD	1 1 0 0 0
26	Sweep		1000 - 1700	CYCLE 0.8s	STANDARD	1 1 0 0 1
27	Sinusoidal		1000 - 3000	CYCLE 0.64s	STANDARD	1 1 0 1 0
28	Single Shot Ding Dong		700 - 600	0.4s/0.7s	SINGLE SHOT DING DONG	1 1 0 1 1
29	White Noise		Random	-	STANDARD	1 1 1 0 0
30	Intermittent White Noise		Random	0.5s ON/0.5s OFF	STANDARD	1 1 1 0 1
31	Ding Dong		700 - 600	0.9s/1.4s/1s OFF	REPEATING DING DONG	1 1 1 1 0
32	Ding Dong		554 - 440	0.9s/1.4s/1s OFF	REPEATING DING DONG	1 1 1 1 1

SWITCH B SOUNDS						
N°	STONE	STONE TYPE	F[Hz]	TIMES	DESCRIPTION	DIP SWITCH
33	Bitone		480 - 610	0.5s/0.5s	GENERAL PURPOSE - EVACUATION 1	0 0 0 0 0
34	Bitone		970 - 630	0.5s/0.5s	APOLLO FIRE SYSTEM BS5839	0 0 0 0 1
35	Bitone		554 - 440	0.1s/0.4s	FRANCE - AFNOR NF S 32 001	0 0 0 1 0
36	Bitone		440 - 554	0.5s/0.5s	GENERAL PURPOSE	0 0 0 1 1
37	Bitone		510 - 610	0.5s/0.5s	GENERAL PURPOSE	0 0 1 0 0
38	Bitone		510 - 610	1s/1s	GENERAL PURPOSE	0 0 1 0 1
39	Bitone		600 - 700	1s/1s	GENERAL PURPOSE	0 0 1 1 0
40	Bitone		550 - 1000	0.5s/0.5s	GENERAL PURPOSE	0 0 1 1 1
41	Bitone		550 - 1000	1s/1s	GENERAL PURPOSE	0 1 0 0 0
42	Bitone		800 - 1000	0.5s/0.5s	GENERAL PURPOSE	0 1 0 0 1
43	Bitone		800 - 1000	1s/1s	GENERAL PURPOSE	0 1 0 1 0
44	Bitone		1000 - 2000	0.5s/0.5s	GENERAL PURPOSE	0 1 0 1 1
45	Bitone		2400 - 2850	0.265s/0.265s	GENERAL PURPOSE	0 1 1 0 0
46	Bitone		2400 - 2850	0.465s/0.465s	GENERAL PURPOSE	0 1 1 0 1
47	Bitone		640 - 970	0.5s/0.5s	GENERAL PURPOSE	0 1 1 1 0
48	Bitone		490 - 610	0.25s/0.25s	GENERAL PURPOSE	0 1 1 1 1
49	Linear		610	-	GENERAL PURPOSE - EVACUATION 2	1 0 0 0 0
50	Linear		500	-	GENERAL PURPOSE	1 0 0 0 1
51	Linear		970	-	BS5839-1:2002	1 0 0 1 0
52	Intermittent		490	0.5s ON/1s OFF	GENERAL PURPOSE - WARNING	1 0 0 1 1
53	Intermittent		544	0.625s ON/0.625s OFF	GENERAL PURPOSE	1 0 1 0 0
54	Intermittent		660	6.5s ON/13s OFF	SWEDISH (PRE-MESS)	1 0 1 0 1
55	Intermittent		970	1s ON/1s OFF	APOLLO FIRE SYSTEM BS5839	1 0 1 1 0
56	Intermittent		2850	0.5s ON/0.5s OFF X 3 1.5s OFF	ISO 8201 HIGH TONE	1 0 1 1 1
57	Sweep		500 - 1200	CYCLE 3.75s/0.25s OFF	AS2220	1 1 0 0 0
58	Sweep		1400 - 1600	CYCLE 1.5s	NF 48-265	1 1 0 0 1
59	Sweep		800 - 970	CYCLE 1.5s	BS5839-1:2002	1 1 0 1 0
60	Sweep		1200 - 500	CYCLE 1s	DIN 33 404	1 1 0 1 1
61	Chime 2 single		554 - 440	0.35s/0.7s	SINGLE SHOT DING DONG	1 1 1 0 0
62	White Noise		Random	-	STANDARD	1 1 1 0 1
63	Sinusoidal		500 - 2500	CYCLE 0.32s	STANDARD	1 1 1 1 0
64	Ding Dong		554 - 440	0.45s/0.7s/0.5s OFF	REPEATING DING DONG	1 1 1 1 1

SIRENA

MLINE | SIR-E S

MLINE | SIR-E LED S

IP 65 Class 2

CE UK CA

- ISTRUZIONI DI INSTALLAZIONE E UTILIZZO - INSTALLATION AND APPLICATION INSTRUCTIONS -
- INSTRUCTIONS D' INSTALLATION ET D' UTILISATION - INSTALLATIONS- UND BEDIENTUNGSANLEITUNG -
- INSTRUCCIONES DE INSTALACIÓN Y EMPLEO -

SIR-E
SIR-E LED

SIR-E S LT

SIR-E LED S LT

SIR-E S MT

SIR-E LED S MT

SIR-E S HT

SIR-E LED S HT

SIR-E S/SIR-E LED S + SHALLOW

SIR-E S/SIR-E LED S + DEEP

SIR-E S/SIR-E LED S + WALL

SIR-E S/SIR-E LED S + DOUBLE

SIR-E S/SIR-E LED S + POLE

FUSIBILE DI PROTEZIONE
Sulla linea di alimentazione utilizzare fusibili ritardati dimensionati a seconda della tensione

FUSE WIRE PROTECTION
On the power supply line the rating of the supply fuse must be according to the voltage

FUSIBLE DE PROTECTION
Sur la ligne d'alimentation utiliser des fusibles retardés dimensionnés selon la tension

SCHUTZSICHERUNG
Für die Zuleitung träge Sicherungen verwenden, die nach der Spannung zu bemessen sind

FUSIBLE DE PROTECCIÓN
En la línea de alimentación emplear fusibles de seguridad adecuados al voltaje

L'INSTALLAZIONE DEVE ESSERE EFFETTUATA SOLO DA PERSONALE SPECIALIZZATO - INSTALLATION HAS TO BE DONE BY QUALIFIED PERSONNEL.
L'INSTALLATION DOIT ÊTRE EFFECTUÉE PAR PERSONNEL QUALIFIÉ - INSTALLATION IST VON EINER FACHKRAFT VORZUNEHMEN
LA INSTALACIÓN SOLO DEBE SER REALIZADA POR PERSONAL CUALIFICADO

NON SMALTIRE COME RIFIUTO URBANO - NOT TO BE DISPOSED OF AS COMMON WASTE - NE PAS ELIMINER COMME DECHET URBAIN
NICHT ÜBER DIE NORMALE SAMMLUNG VON HAUSMÜLL ENTSORGEN - NO ELIMINAR COMO DESECHO URBANO

Sirena SpA C.so Moncenisio, 5-10-12-14-16 10090 ROSTA (TO) | Italia
Tel. +39 011 95 68 555 Fax +39 011 95 67 928 www.sirena.it E-mail: info@sirena.it

09/2022 - Ref. 012906901

